



Patterns for SC408


1
Light Chase

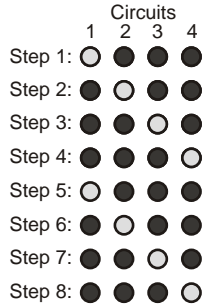


2
Fill & Swipe Forward

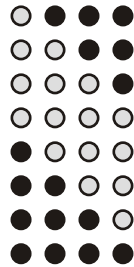


3
Fill & Swipe Back

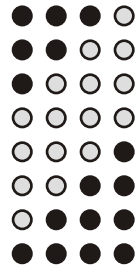


4
Light Bounce

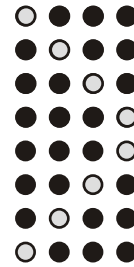


5
Dark Bounce

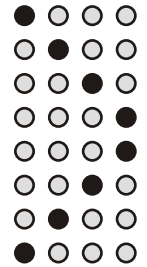


6
Dark Chase

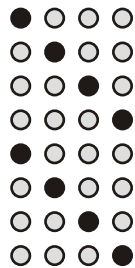


7
Flip-Flop

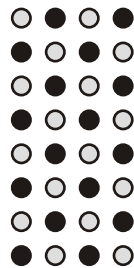


8
Flash All

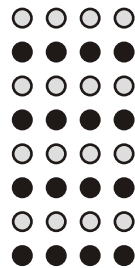


9
Flash Light Chase

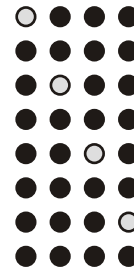


A
Spring Forward

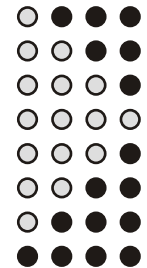


B
Spring Back

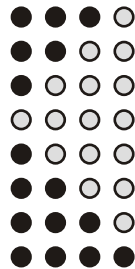


C
Flash Dark Chase

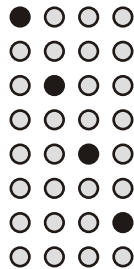


D
Crawl Forward

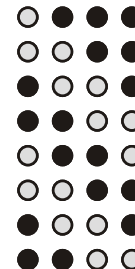

E
Crawl Back

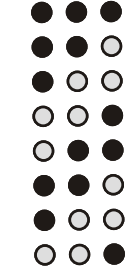

F
All On

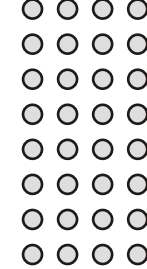

0

Auto Cycle
Patterns 1-F
4 x each
then repeat

KEY: ○ ON
● OFF