



PROTOCOL PD408

4 x 8 A. outputs

PD408-120 : 4 x 1000 Watts @ 120 VAC

PD408-277 : 4 x 2200 Watts @ 277 VAC



USER'S MANUAL



GENERAL DESCRIPTION

The **PD408** is a 4-channel dimmer pack for the PROTOCOL lighting control system. The **PD408** dimmer pack contains four **solid-state** dimmers. Power is fed to the **PD408** from two 20 Amp. breakers on the same electrical phase. Each breaker feeds two dimmers, each rated for a maximum output current of **8 amperes (960 watts at 120 VAC)**. The **PD dimmer** contains two printed circuit boards, the load driver module (**LDM**) and an **INT04** control module. The dimmers are triggered by the firing board (**INT04**).

The INT04 - (See diagram on Page 2)

The **INT04** is a microprocessor based control board with a nonvolatile memory chip, a communications chip, and a regulated DC power supply. The **INT04** also contains: address selectors, LED output monitors and other support circuitry. The microprocessor is driven by powerful distributed intelligence software which handles all control and communications functions. The memory chip on the **INT04** holds all of the **PD** dimmer's pertinent information and settings which include low and high trim levels for each of the outputs it controls.

The **PD** dimmer does not rely on any shared data source and functions independently of any other system component and without a central system controller. The **PD** communicates with Protocol system stations and controllers over a single **twisted-pair** of wires and can be connected anywhere on the **system network bus**. This adds convenience and versatility by allowing **PD** dimmers to be installed close to their loads and/or service panels.

The LDM (Load Driver Module) - (See Diagram on Page 2)

The **LDM**: (**PD408-OM**) is equivalent to four solid-state relays (SSR's) assembled on a single circuit board. The **LDM** is mounted at the bottom of the **PD**'s enclosure which also serves as a heat sink. The relays are triggered by low-voltage signals generated by the **INT04** module. These signals are optically-isolated by the **LDM** circuitry from all line voltage elements. A step-down 10VAC-transformer on the **LDM** board supplies power to the **INT04** module described above.

OTHER INFORMATION - (See diagram Page 4)

Several **PD** dimmer packs (**PD804 / PD404 / PD104 / PD408 / PD216**) may be daisy-chained together in any combination, up to a maximum of 63 individually addressed **INT04s** (each **PD104 / PD404 / PD408 / PD216** has **one** **INT04**, and each **PD804** has **two** **INT04s**). **PD** dimmers are daisy-chained using the **RJPD-6** cables (CAT5 network cables) supplied with the units. Each **PD** has a set of **address selectors** which must be set to a **unique address**. Please see Table 4 on Page 9 of this manual or the PROTOCOL SOFTWARE MANUAL for more information on addressing the **PD** dimmer pack.


DIMMING / SWITCHING - (See Page 8 for more information)

Through the PROTOCOL's "**SOFTPRO**" configuration software, each of the **PD** dimmer's outputs may be independently configured not to dim. A **PD** dimmer may control any combination of dimmed and switched loads. There is also a **HARDWARE** lock to ensure circuits do not dim. All outputs controlled by each **INT04** may be configured to **NOT DIM** by the installation of a **small jumper** on the back of the **INT04** circuit board. This may be done at the factory or in the field. This jumper may be removed to allow the future dimming of those outputs. Please see Page 8 for location of this jumper.


Alternatively, the **PD408** may be ordered as a SWITCH-ONLY unit: the **PD408-S**. This unit has all the same features as the **PD408** except that there is no dimming, and there are no chokes installed inside the unit. All other information in this manual is the same for both the **PD408** and the **PD408-S**.



PD408 Load Driver Module Information

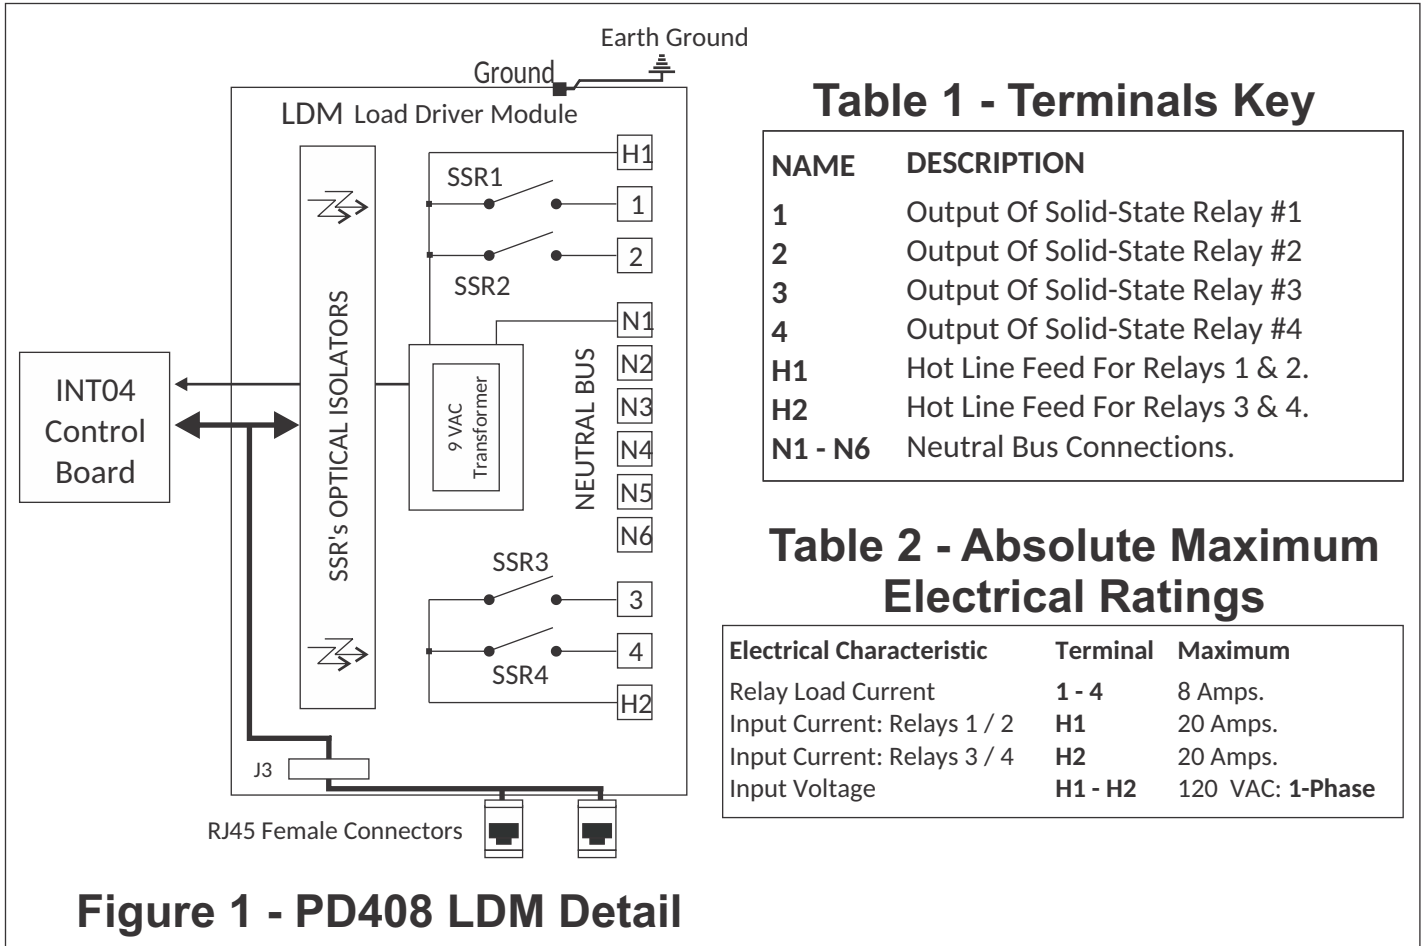

PD408 INT04 Information

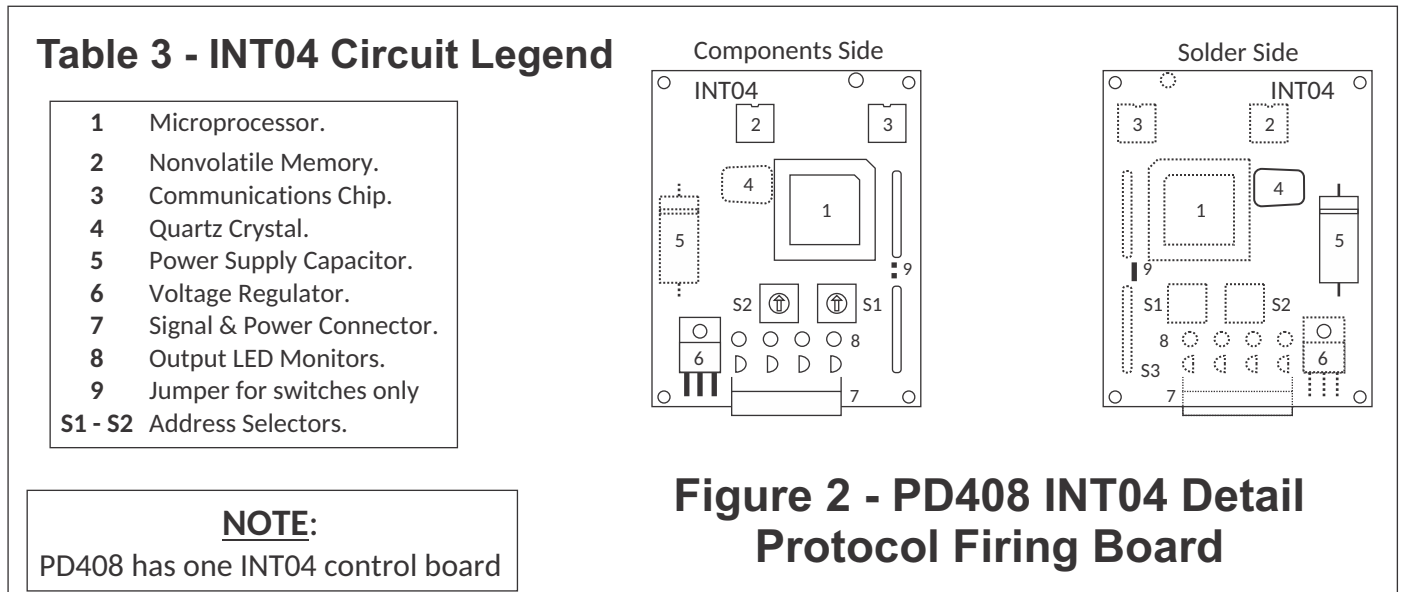




Enclosure Installation

Surface mount the dimmer pack in a well ventilated area where the ambient temperature does not exceed **104° F** for full load operation. Allow **2"** of side clearance for proper air circulation and servicing. Installation clearance shall meet local and/or NEC code requirements. Enclosures may be attached to the wall or other mounting surface by holes in the heat sink flanges. Refer to the drawings below (Figure 3) for the correct dimensions. Conduit shall be pulled to the top of the dimmer packs.

NOTE: The PD408 may create a slight buzzing noise and should not be located where this is objectionable.

Figure 3 - PD408 Dimensional Diagram

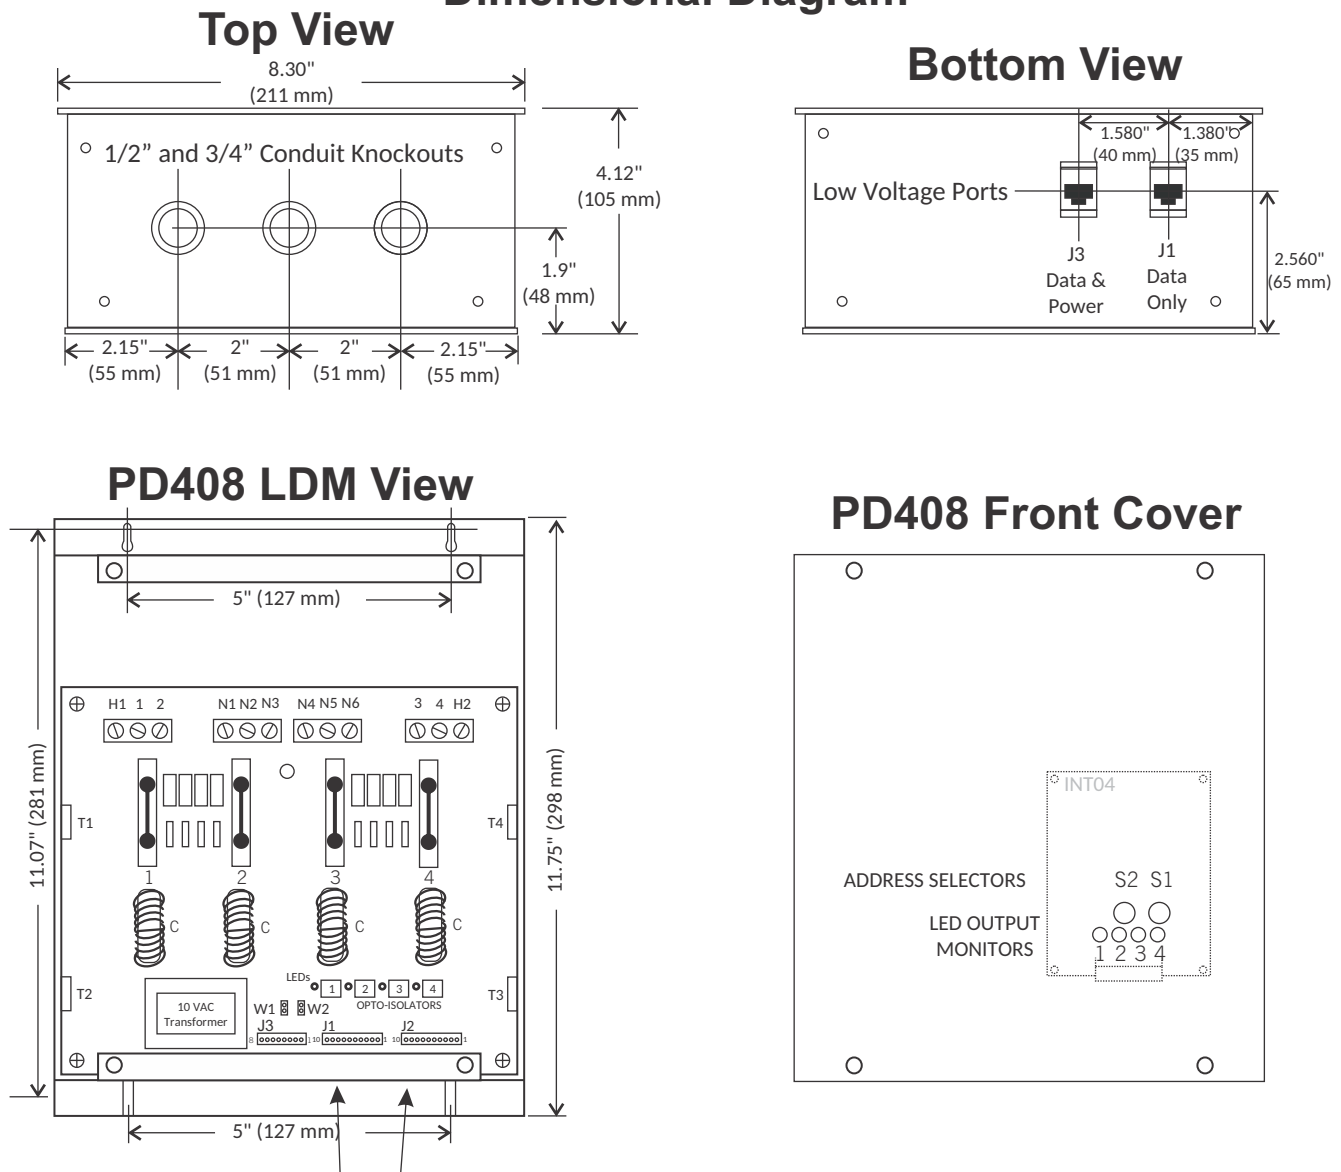


RJ45 Data Bus Connectors



PD Dimmer Low Voltage Wiring Methods

Pin	RJ45	PROTOCOL Lighting controls
1	Not Used	
2	Not Used	
3	Not Used	
4	Not Used	
5	Not Used	
6	Not Used	
7	- DATA	
8	+ DATA	

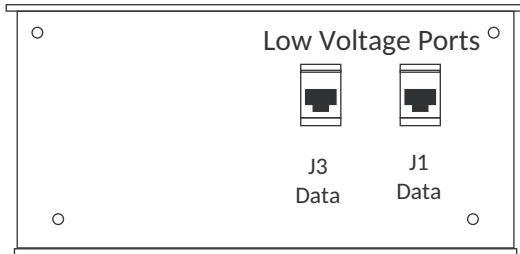

PD Dimmer Bottom View


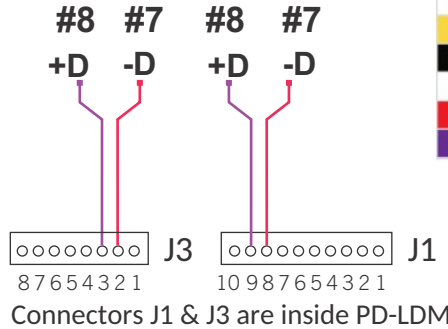


Figure 4 - PD Dimmer Network Ports & Pin Assignments

Figure 5 - Typical PROTOCOL Installation



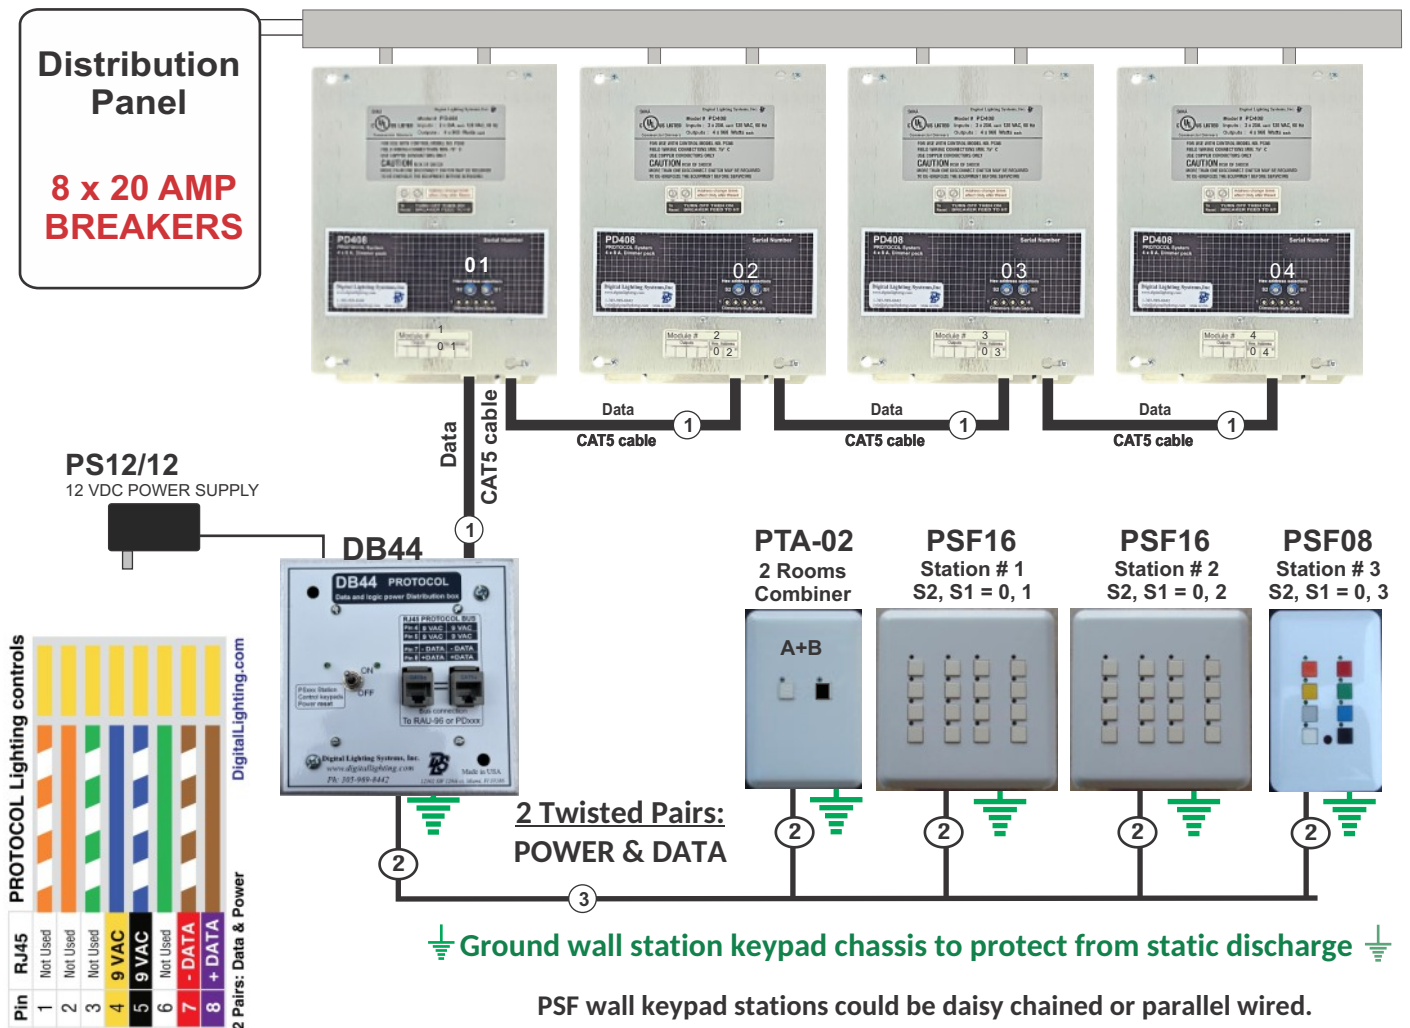

PD408 General Wiring Information

DO NOT EXCEED 1000 W. (8 Amps. @ 120 VAC) per dimmer output.

All wiring between the control stations, dimmers, and other system controllers (network bus) is low voltage (NEMA Class 2) and may be run with two, twisted pair, shielded #18 AWG wire. Control network bus may be Carol Cable #C3362 unless otherwise required. Consult the PROTOCOL Hardware Installation Manual, Appendix E, for maximum wire length.

PD408 dimmer packs may be fed by one or two 20 A. (maximum) branch circuits and may have up to **four** separately dimmed loads.

Both breakers must be on the **same power phase**.

CAUTION: **DO NOT** attempt to parallel outputs to increase capacity.


Installations must conform to local and/or NEC code requirements.

Each load must have its own Neutral wire for full load operation.

All line voltage wires must have copper conductors of adequate Gauge with 90° C wire insulation.

POWER EACH LOAD DIRECTLY BEFORE CONNECTING IT TO THE PD408 TO ENSURE PROPER WIRING.

Figure 6 - PD408 Typical Wiring 120 VAC

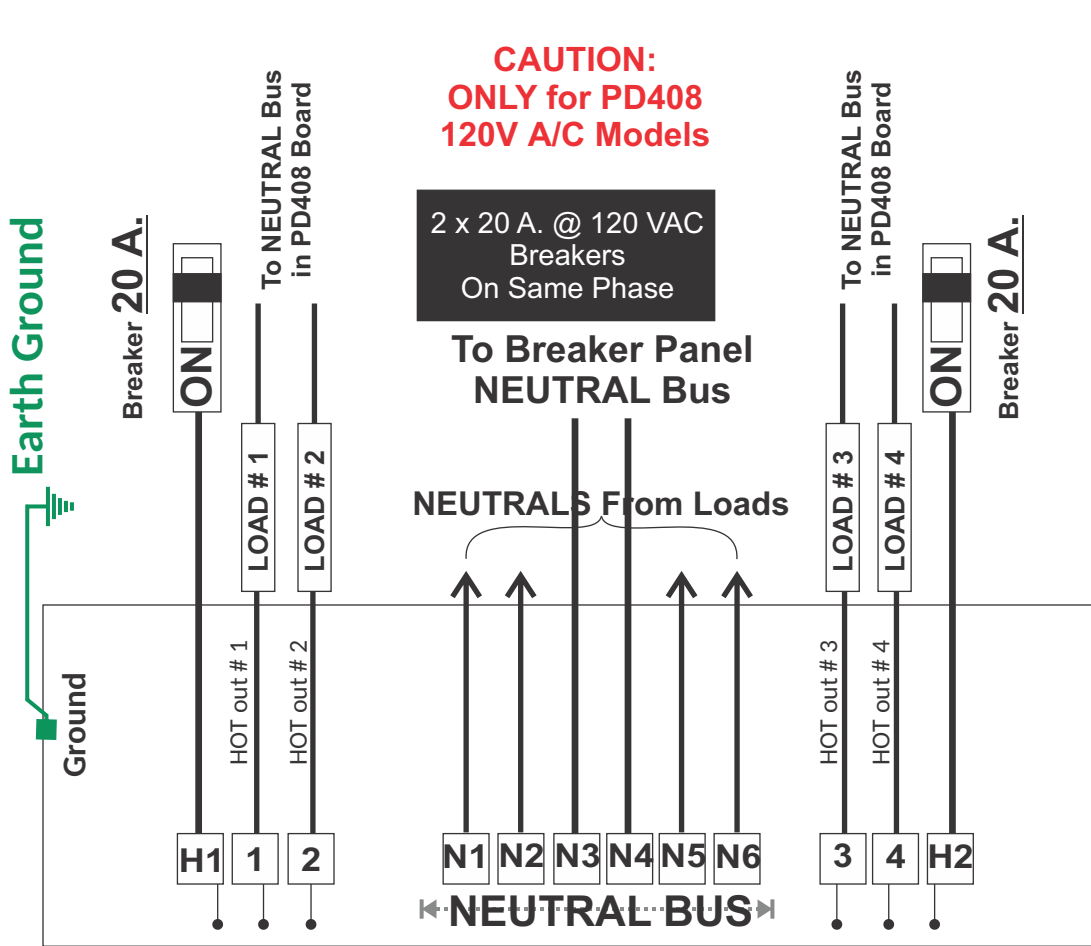

For Full Load Operation Use:
#12 AWG copper conductors for: Line & Neutral feeds.
#14 AWG copper conductors in / out to: each Load.
MAX Load Rating: 8 Amperes (1000W @ 120 VAC).





PD408 General Wiring Information

DO NOT EXCEED 2200 W. (8 Amps. @ 277 VAC) per dimmer output.

All wiring between the control stations, dimmers, and other system controllers (network bus) is low voltage (NEMA Class 2) and may be run with two, twisted pair, shielded #18 AWG wire. Control network bus may be Carol Cable #C3362 unless otherwise required. Consult the PROTOCOL Hardware Installation Manual, Appendix E, for maximum wire length.

PD408 dimmer packs may be fed by one or two 20 A. (maximum) branch circuits and may have up to **four** separately dimmed loads.

Both breakers must be on the **same power phase**.

CAUTION: DO NOT attempt to parallel outputs to increase capacity.

Installations must conform to local and/or NEC code requirements.


Each load must have its own Neutral wire for full load operation.

All line voltage wires must have copper conductors of adequate Gauge with 90° C wire insulation.

POWER EACH LOAD DIRECTLY BEFORE CONNECTING IT TO THE PD408 TO ENSURE PROPER WIRING.

Figure 7 - PD408 Typical Wiring 277 VAC

Earth Ground

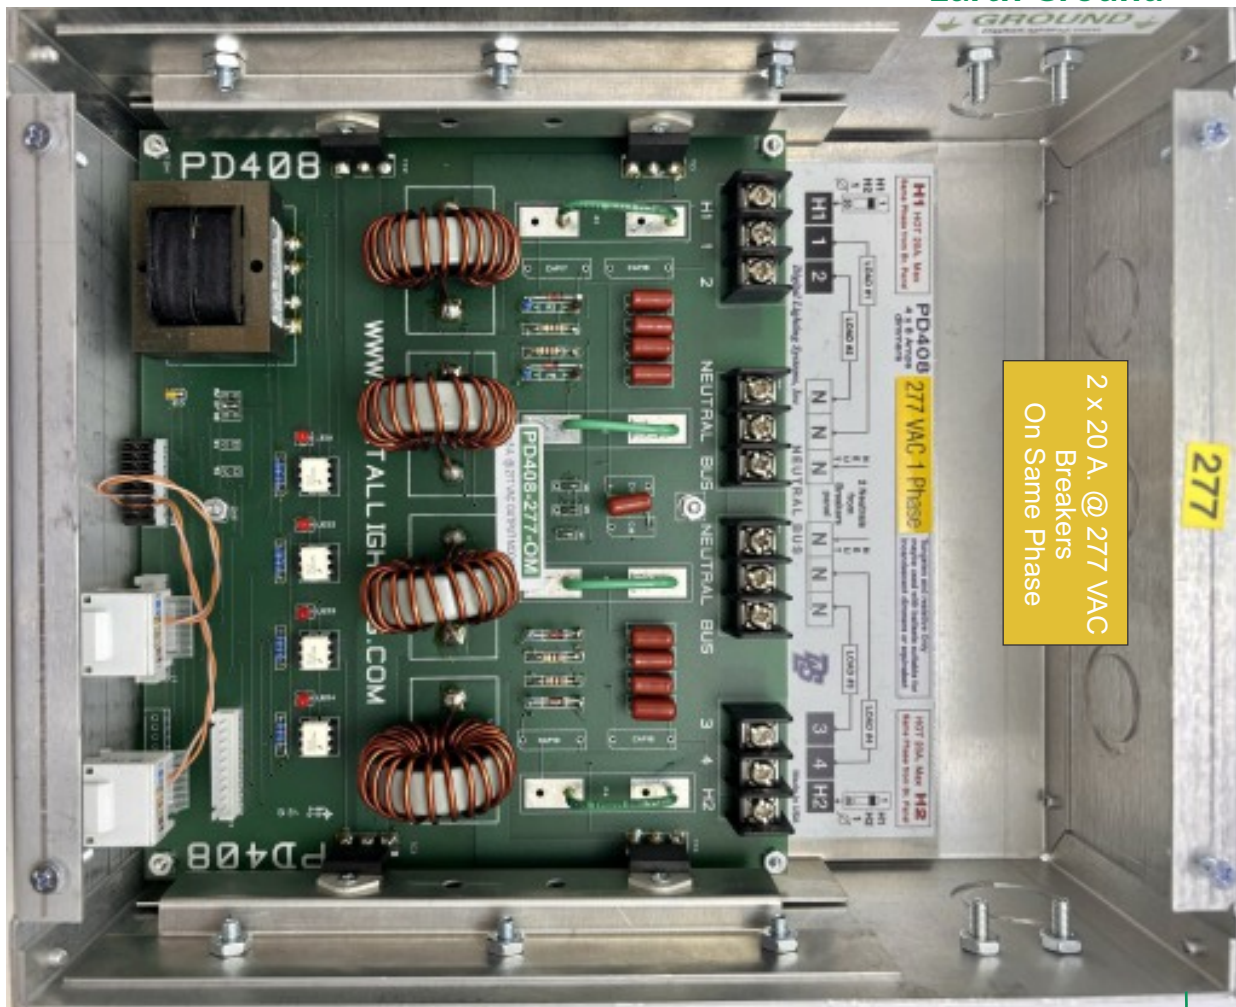

CAUTION: ONLY PD408 Protocol 277 VAC Models

For Full Load Operation Use:
#12 AWG copper conductor wire for:
Line & Neutral Feeds.
#14 AWG copper conductors in/out to each load.
Max. Load: 8 Amperes (2216W @ 277 VAC).

Earth Ground



PD408 General Wiring Information: 220-240 VAC

DO NOT EXCEED 2000 W. (8 Amps. @ 240 VAC) per dimmer output.

All wiring between the control stations, dimmers, and other system controllers (network bus) is low voltage (NEMA Class 2) and may be run with two, twisted pair, shielded #18 AWG wire. Control network bus may be Carol Cable #C3362 unless otherwise required. Consult the PROTOCOL Hardware Installation Manual, Appendix E, for maximum wire length.

PD408 dimmer packs may be fed by one or two 20 A. (maximum) branch circuits and may have up to **four** separately dimmed loads.

Both breakers must be on the **same power phase**.

CAUTION: **DO NOT** attempt to parallel outputs to increase capacity.


Installations must conform to local and/or NEC code requirements.

Each load must have its own Neutral wire for full load operation.

All line voltage wires must have copper conductors of adequate Gauge with 90° C wire insulation.

POWER EACH LOAD DIRECTLY BEFORE CONNECTING IT TO THE PD408 TO ENSURE PROPER WIRING.


Figure 8 - PD408 Typical Wiring 220-240 VAC

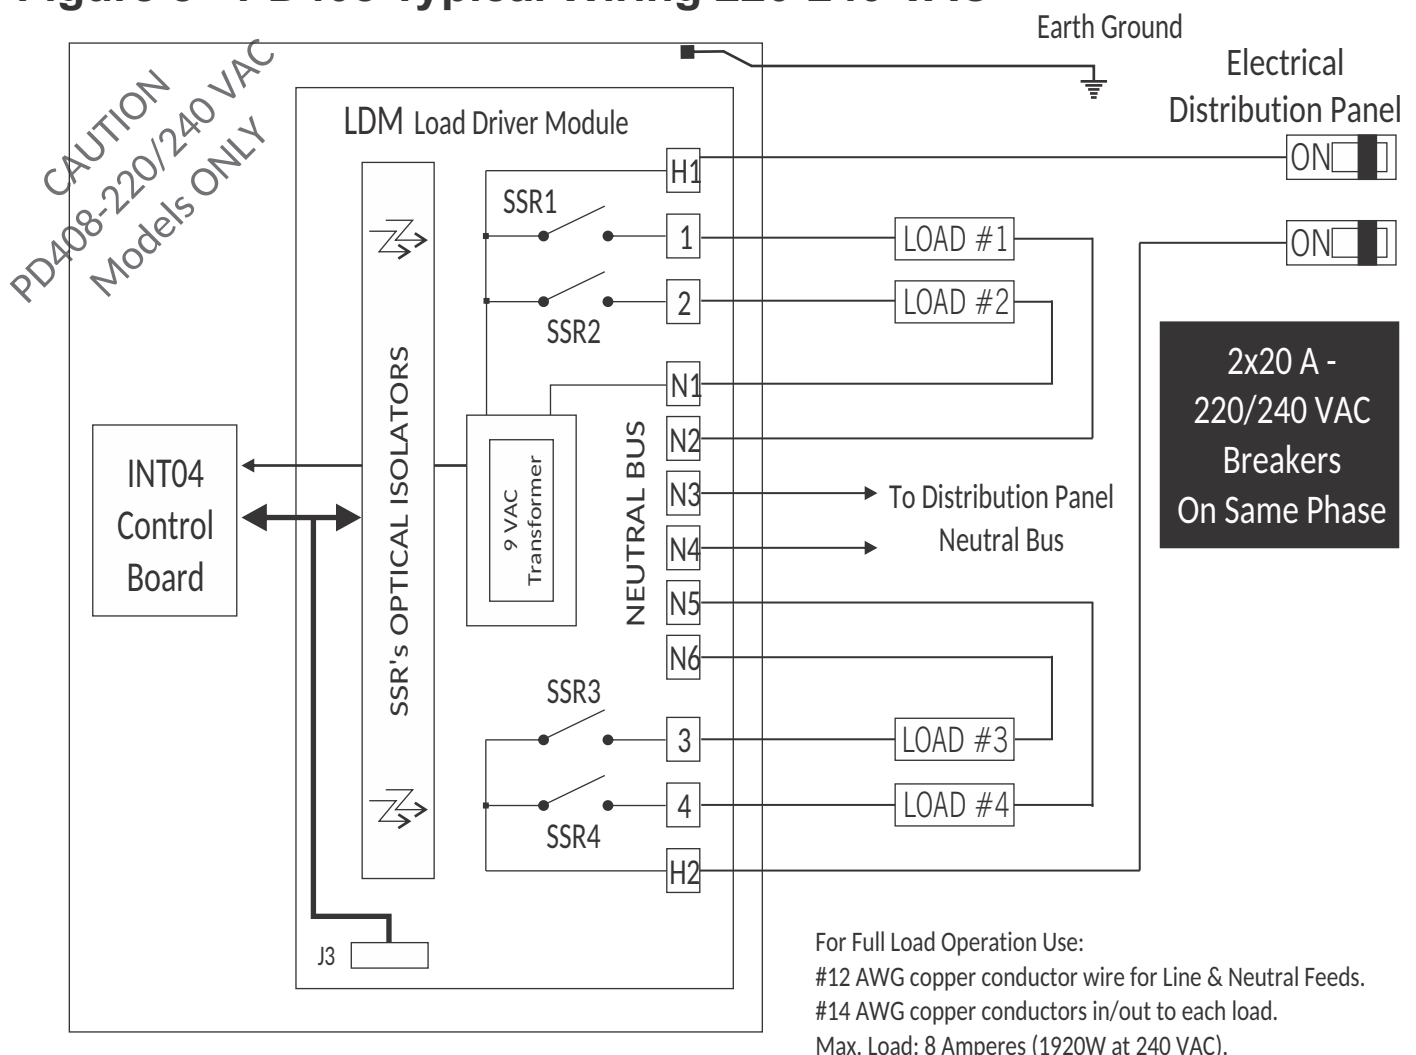



PD408 General Wiring Information: LOW VOLTAGE

**Figure 9 - PD408-12 / PD408-24
Low Voltage Load & Power Wiring**

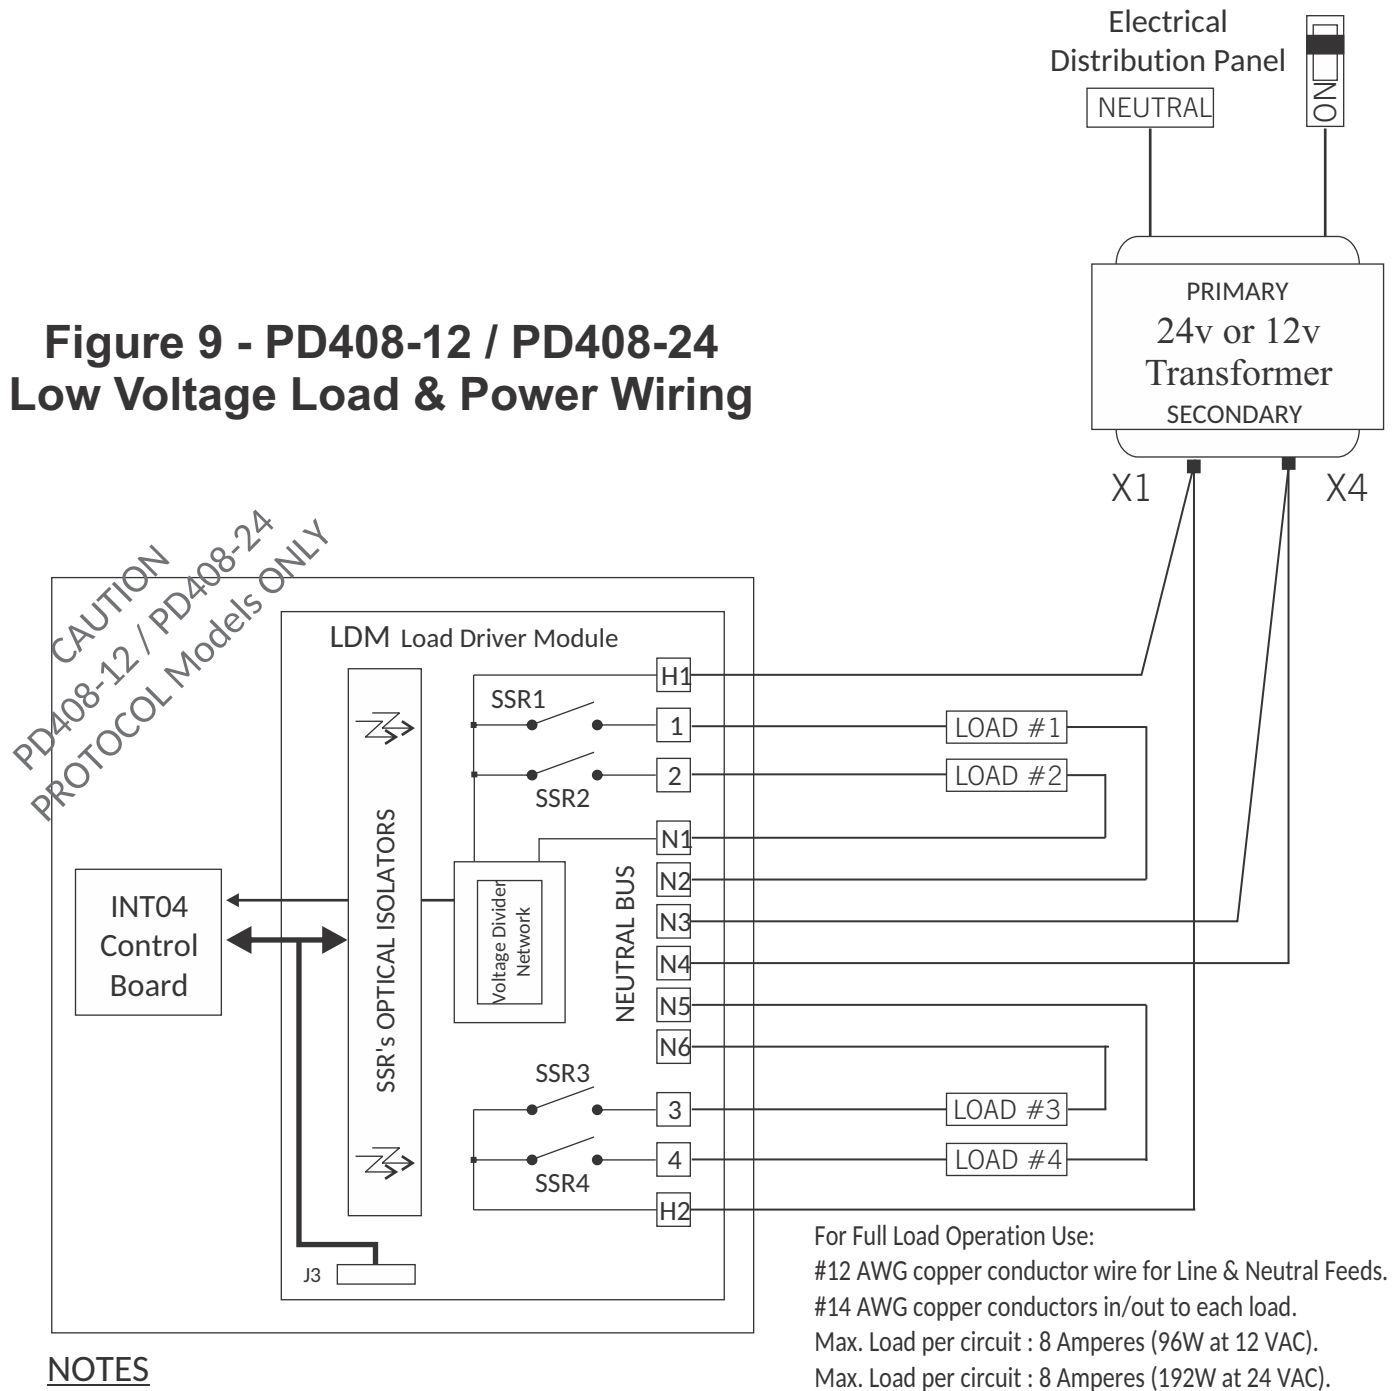

NOTES

1. With PD408-24 you may use a single 24 VAC-800 VA or better transformer or two separate 24 VAC-400 VA or better transformers.
2. With PD408-12 you may use a single 12 VAC-400 VA or better transformer or two separate 12 VAC-200 VA or better transformers.
3. Follow transformer's installation & wiring instructions from manufacturer.



PROTOCOL Address Setting

Up to 63 uniquely addressed INT04 boards (two in each PD804, one in each PD104 / PD404 / PD408 / PD216) may be installed in any one system. Each INT04 must be set to a unique decimal address between 1 and 63. (INT04 #63 output 4 is not available for use) Total number of zones: **251**. ((63 x 4) - 1 = 251) Refer to **TABLE 4** On **Page 9** of this manual for proper setting of the address selectors S1 and S2 on the PD dimmer.

Example: S2 & S1 should be set respectively to **1 & A** if the desired address is 26 (1 x 16 + A = 26, A=10). In this example, outputs 1 - 4 of PD408 # 26 are referred to as 26.1, 26.2, 26.3, & 26.4 when configuring buttons on PROTOCOL stations, using the PROTOCOL **SOFTPRO** programming software. Address used must not be an address already used elsewhere in the system).

NOTE: It is also possible to quadruple the maximum number of outputs on a system up to 1004 circuits. An INT04 may have a decimal address of up to, and including, 252. Please contact factory for more details. For a complete Decimal to Hexadecimal conversion chart, please refer to **Appendix A** in the PROTOCOL **Hardware** and **Software Manuals**.


Non-Dim Output Setting

Whilst outputs may be programmed to dim or not dim through the “SOFTPRO” configuration software, in some circumstances it may be preferable for all outputs in the PD dimmer to be configured for non-dim (switch only) operation by a hardware lock. This prevents inadvertent dimming, or damage, of loads that cannot be dimmed, such as contactors, mechanical relays, motors, non-dim fluorescent, etc...

Since this procedure involves adding a jumper to the INT04 board, it is preferable to have it performed by the factory, at time of order. However, any qualified electronic technician can perform the procedure in the field when necessary. **Figure 10** shows the location for installing the non-dim (ND) jumper.

Figure 10 - PD Dimmer INT04 Detail

Jumper to Ensure Non-Dim function of INT04 to be installed here.

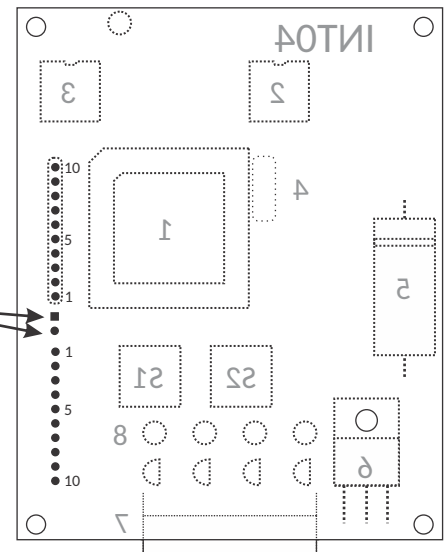

INT04 Solder (Back) Side

PD Installation Checklist

BEFORE ENERGIZING THE PD DIMMER, MAKE SURE:

- Loads are tested before connecting to dimmers.
- Breaker feed lines are on same electrical phase.
- PD dimmer has been properly grounded.
- All line voltage screw terminals are properly tightened to prevent hot spots.
- Low voltage data lines connections are properly insulated.
- Low voltage data lines polarity is observed throughout the system.
- The PD dimmer’s INT04 is set to the right addresses.
- ALL KNOCKOUT HOLES MUST BE COVERED.**



Table 4 - PROTOCOL PD Dimmer Address Selection

00	INVALID ADDRESS	32	set S2,S1 to 2 , 0
01	set S2,S1 to 0 , 1	33	set S2,S1 to 2 , 1
02	set S2,S1 to 0 , 2	34	set S2,S1 to 2 , 2
03	set S2,S1 to 0 , 3	35	set S2,S1 to 2 , 3
04	set S2,S1 to 0 , 4	36	set S2,S1 to 2 , 4
05	set S2,S1 to 0 , 5	37	set S2,S1 to 2 , 5
06	set S2,S1 to 0 , 6	38	set S2,S1 to 2 , 6
07	set S2,S1 to 0 , 7	39	set S2,S1 to 2 , 7
08	set S2,S1 to 0 , 8	40	set S2,S1 to 2 , 8
09	set S2,S1 to 0 , 9	41	set S2,S1 to 2 , 9
10	set S2,S1 to 0 , A	42	set S2,S1 to 2 , A
11	set S2,S1 to 0 , B	43	set S2,S1 to 2 , B
12	set S2,S1 to 0 , C	44	set S2,S1 to 2 , C
13	set S2,S1 to 0 , D	45	set S2,S1 to 2 , D
14	set S2,S1 to 0 , E	46	set S2,S1 to 2 , E
15	set S2,S1 to 0 , F	47	set S2,S1 to 2 , F
16	set S2,S1 to 1 , 0	48	set S2,S1 to 3 , 0
17	set S2,S1 to 1 , 1	49	set S2,S1 to 3 , 1
18	set S2,S1 to 1 , 2	50	set S2,S1 to 3 , 2
19	set S2,S1 to 1 , 3	51	set S2,S1 to 3 , 3
20	set S2,S1 to 1 , 4	52	set S2,S1 to 3 , 4
21	set S2,S1 to 1 , 5	53	set S2,S1 to 3 , 5
22	set S2,S1 to 1 , 6	54	set S2,S1 to 3 , 6
23	set S2,S1 to 1 , 7	55	set S2,S1 to 3 , 7
24	set S2,S1 to 1 , 8	56	set S2,S1 to 3 , 8
25	set S2,S1 to 1 , 9	57	set S2,S1 to 3 , 9
26	set S2,S1 to 1 , A	58	set S2,S1 to 3 , A
27	set S2,S1 to 1 , B	59	set S2,S1 to 3 , B
28	set S2,S1 to 1 , C	60	set S2,S1 to 3 , C
29	set S2,S1 to 1 , D	61	set S2,S1 to 3 , D
30	set S2,S1 to 1 , E	62	set S2,S1 to 3 , E
31	set S2,S1 to 1 , F	63	set S2,S1 to 3 , F

NOTES:

Address: 0 Decimal // (S2 , S1 = 0 , 0) Hexadecimal is **not allowed** on any PROTOCOL device.

Minimum PD Dimmer Address: 1 Decimal // (S2 , S1 = 0 , 1) Hexadecimal

Maximum PD Dimmer Address: 63 Decimal // (S2 , S1 = 3 , F) Hexadecimal

LIMITED WARRANTY

Digital Lighting Systems, warrants to the purchaser that its products have been carefully manufactured and inspected and are warranted to be free from defects of workmanship and materials when used as intended. Any abuse or misuse contrary to normal operation shall void this warranty.

Digital Lighting Systems' obligation under this warranty shall be limited to replacement or repair of any units as shall within two years of date of invoice from **Digital Lighting Systems**, prove defective; and **Digital Lighting Systems** shall not be liable for any other damages, whether direct or consequential. **The implied warranties of merchantability and fitness for a particular purpose are limited to the duration of the expressed warranty.** Some states do not allow the exclusion of the limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, you may also have other legal rights which vary from state to state.

Defective merchandise may be returned to **Digital Lighting Systems**, prepaid, after prior notification has been given and approval obtained for the return. To obtain prior approval for the return of the defective items, contact your local Digital Lighting Systems distributor, representative, or:

Digital Lighting Systems, Inc.

12302 SW 128 Ct. Bay # 105
Miami, FL 33186

(305) 969-8442
info@digitallighting.com



Upon request, replacement unit(s) will be shipped as soon as available. Unless immediate shipment of replacement merchandise is requested, **Digital Lighting Systems** will not ship replacement merchandise until defective merchandise is received, inspected, and determined to be defective.

No labor charges in connection with warranty problems will be reimbursed by Digital Lighting Systems without prior written approval from the factory.

Digital Lighting Systems distributors and representatives have no authority to change this warranty without written permission.

Digital Lighting Systems reserves the right to determine the best method of correcting warranty problems.